



# Heat Pump Installation, Maintenance and Service Manual

This booklet is to be carefully read and instructions followed for efficient  
and trouble free operation of the  
Accent Swimming Pool Heat Pump

**21 Atkinson Street  
Liverpool NSW 2170**

**Tel: (02) 8706 8400  
Fax: (02) 8706 8477**

ABN 28 062 383 224

## **TABLE OF CONTENTS:**

Introduction	Page 3
<b><u>Section 1 Installation</u></b>	Page 4
Site Location, Preparation & unit positioning	Page 4
Plumbing	Page 5
Chemical Treatment	Page 5
Electrical	Page 6
Control Design for Pool Heating	Page 6
Link between Heat Pump, Water Pump and Thermostat for Pool Heating	Page 6
Precautions	Page 7
<b><u>Section 2 Commissioning</u></b>	Page 7
<b><u>Section 3 Operation</u></b>	Page 8
Thermostat Operation	Page 9
Heat up time	Page 9
De-icing	Page 9
<b><u>Section 4 Maintenance</u></b>	Page 10
Heat Exchanger Care	Page 10
Service Assistance	Page 11
<b><u>Section 5 Troubleshooting</u></b>	Page 12
Machine will not start	Page 12
Pool will not heat	Page 12
Compressor will not run	Page 12
Compressor motor hums but will not start	Page 12
<b><u>Section 6 Installation Schematic Drawings</u></b>	Page 13
Typical Single Pool Heat Pump Schematic For Pool Filtration	Page 13
Typical Single Pool Heating Schematic	Page 13
Typical Multiple Pool Heat Pump Installation	Page 13
<b><u>Section 7 Speciality Applications</u></b>	Page 13
Thermostat Operation	Page 13
<b>Section 8 Warranty</b>	Page 18
Manual Pool Only V2 190814	19/08/2014

## INTRODUCTION

---

Accent Hot Water Heat Pumps are available in sizes from 10kW to 300kW nominal output. The units are most commonly manufactured as air-to-water design, in which it extracts heat from ambient air and transfers it into the water, via a direct expansion refrigeration circuit to provide the most cost efficient method of water heating. The units can also be manufactured as water-to-water or ground-coupled design.

Each is a fully packaged unit, requiring only electrical and water connections to be made on installation.

Each is factory charged, with refrigerant R407c being ideally suited for commercial or industrial situations requiring hot water up to 60°C or up to 38°C for pool heating. Accent also manufactures pool heaters with R410a and R134a may be used for special hot water applications.

The Accent heat pump is installed to a wide diversity of commercial and industrial applications. The performance of the unit varies with ambient operating conditions, water flow, and water temperature and as such, selection should be done in conjunction with an experienced heat pump dealer or the manufacturer.

Accent units are custom-manufactured to meet specific task / site requirements and a wide range of options is available in unit design.

It is characteristic of heat pumps to form ice on the evaporator at cool ambient below 5°C. As such, various de-ice mechanism options are provided.

This manual includes important information in regard to installation, operation, maintenance and servicing and should be retained for the life of the heater. Correct installation and familiarity with the operational guidelines is important.

For validity of the Accent Air warranty, installation must be carried out by registered trade person.

## Delivery

- Reference should be made to the unit specifications to determine weight and lifting requirements.



- Packaging materials should be removed upon delivery so to avoid any sweating of the electrical compartment or potential staining to the case, particularly in tropical areas.

## Site Location, Preparation & Unit Positioning

- Heat Pump heating efficiency and output increases with the rise in entering air temperature and as such, it is not necessary for the unit to be placed in sunlight in the manner of a solar heating system. On the other hand, direct sunlight to the evaporator may provide a marginal increase in heat transfer.
- Locating the Heat Pump close to other system equipment like filter, pump, tank, etc will minimise friction and heat losses in the water circuit.
- It is important that the Clearance Guidelines included in this Manual are read and understood. These guidelines set out the minimum clearance requirements in respect of air flow and servicing.
- Free circulation of air across the coil, requires no obstructions on the intake or fan discharge of Heat Pumps. In addition, care should be taken to ensure that walls, eaves, etc do not obstruct the release of discharge air such that this may recirculate in the incoming air stream of the unit reducing the efficiency of the heat pump.
- For the plant-room installation, make sure that sufficient fresh air is available via provision of inlet grills in building design, etc. Exhaust air from the Heat Pump must be discharged by a duct away from the fresh air supply. Never install in an enclosed area.
- Service access is required at both ends of the Heat Pump as per the Clearance Guidelines.
- Where multiple units are to be installed, minimum clearance requirements increase.
- The Heat Pump requires a firm base, say concrete slab. Rubber mounts should be installed between the unit and slab.
- Drainage of condensate and entering rain water will occur at drainage points provided at the plumbing end of the unit. To ensure proper drainage, make sure that the unit is located at a slightly tilted angle with the drain on the downhill side of the unit. This can be done by making the concrete slab slightly higher at one end or lifting one end of the unit by rubber mounts, Units up to 80 kW require a minimum of 25 mm fall towards the drain. Units above 80 kW include inbuilt 50mm fall. If the unit is to be installed internally, it is recommended that it sit within a separate drip tray, with provision for drainage of this water to a sewer, etc. Ideally, the condensate drain provision connected to the heat pump drip tray or to the drainage points in the heat pump should be flexible and able to be readily removed for cleaning. Clear plastic connections at the drain will allow the owner to check that debris/dust etc has not restricted the condensate drains. It is important that water is not allowed to pond within the unit so as to avoid corrosion to the base of the compressor or heat exchangers.
- Local building authorities should be consulted for regulations concerning minimum installation distance from pool or other amenities.
- Units to be used in areas having corrosive atmospheres should be specified at time of ordering.

- Consideration should be given to the operating noise, wherever possible the exhaust should be directed away from the occupied areas.

## Plumbing

- It is preferable that the heat pump is connected to filtered water.
- It is essential that the water recirculating pump and pipe sizes be engineered to suit the particular application, giving correct water flow through the heat pump as per the specification requirements of the unit. Inadequate or excessive water flow detracts from heating efficiency and can lead to damage to the unit. Selection of the recirculating pump must be made in accordance with the design flow rate and pressure as per the pump manufacturer's specification.
- If unsure, contact Accent for recommendations on the optimum flow rate. Assistance will be provided where possible in relation to plumbing design and pump selection.
- Water connections on the unit are clearly marked as water inlet and water outlet.
- The installation of breakable unions on both inlet and outlet pipes will facilitate maintenance and water drainage of the system. If the unit is situated below the pool level or an open holding tank, shut off valves should be fitted on the water side of both unions so that removal of the machine is possible without draining the system.
- A separate circuit is generally the most desirable plumbing configuration with individual flow and return line and filter strainer. This may not always be possible particularly with established pools.
- Heat pumps may be plumbed in-line with existing filter equipment, although thought must be given to correct flow, run time and possible over chlorinating and/or dosing by extended running of automatic chlorinator, feeders, etc. Typical plumbing schematics for installation with existing filtration and with a dedicated heating circuit are shown in Section 6.
- A one-way check valve should be installed on the outlet of the heat pump.
- Models without an internal water flow by-pass must have an external by-pass fitted.
- Where multiple units are installed, the heaters must be installed in parallel to equalise pressure drops and balance flow through the heaters. Systems of two or more Heat Pumps require a manifold.
- All Plumbing should be carried out by qualified tradesman (plumber).



## Chemical Treatment

Accent heat pumps designed for swimming pool or spa heating will include a titanium heat exchanger. This material is impervious to chemical corrosion and as such, variations in water quality will not cause damage to the titanium tube. However, it is recommended as a matter of good pool management that the correct chemical balance of the water be maintained as follows:

- pH to be kept between 7.2 and 7.8
- Alkalinity must not exceed 200 PPM
- Free available chlorine must not exceed 6.0 PPM
- Chemicals must be added down stream side of the Heat Pump.
- In line chlorinator must be installed down stream of the Heat Pump.

The maintenance of the above guidelines does not in itself ensure that water is in balance and non-corrosive. Various mechanisms are available to monitor water conditions and information on the Langlier Saturation Index is provided as a commonly applied industry standard.

## Electrical

- All electrical work must be carried out by licensed electricians and all the wiring should be carried out to AS/NZS3000 latest edition wiring standards.
- Refer to the internal electrical wiring diagram supplied with the units before proceeding with electrical work. As a minimum, cable and fuse sizing must be correct relative to the unit's specified requirements. Accent's technical specification for each model nominates electrical demand information and minimum circuit size.
- For models up to 80 kW an isolating switch must be fitted adjacent to the Heat Pump, models above 100 kW have a factory installed isolation switch.
- To install the unit, remove the electrical service panel. No conduit entry points are provided, the installer has to drill an appropriate hole in the desired location. Earth and Neutral wires need to be connected to the appropriate terminal. Line voltage to terminals L1 and L2 and L3 if unit is three phase.
- The unit is fitted with a flow switch so water must be running through the unit before it is able to switch on.

## Control Design for Pool Heating

Heat pumps intended for individual installation to a pool are manufactured with in-built thermostat control and flow/pressure switch.

- The thermostat is mounted on the outside panel. The controller displays entering water temperature, with the sensor being located in a well to the inlet water pipe inside the unit.
- The flow/pressure switch is a safety feature to ensure that the Heat Pump runs only when there is adequate water flow. If water flow is disturbed by backwashing, etc, or inadequate, the unit will switch off by this safety feature.
- In commercial settings, it is important that the heat pump is isolated during backwashing to avoid lock-out or potential short-cycling. Ideally, the unit would be switched off, either at the main switch, the isolating switch located on or adjacent to the unit or at a control sub-board.

For systems comprised of multiple Heat Pump units, the thermostat sensor and well may be provided as follows depending on client requirement:

- Provided loose to allow installation of thermostat controller display in heat pump control panel (located separately to the heat pumps) with well and probe installed in the pool pipe work on the inlet side of the heat pumps or balance tank.
- Provided in the nominated lead-unit (i.e. the control heat pump) with relays fitted to the lag unit(s) to allow control wiring to be run to these units.

## Link between Heat Pump, Water Pump and Thermostat for Pool Heating

The thermostat sensor is the controlling device in the heating system. This determines whether the heat pump unit should run and is activated in response to the parameters set for pool temperature control. That is, the heat pump will run when the entering water temperature (EWT) is less than the desired set point (normally with a -0.5°C split) and stop running when the EWT is a set point. In simple terms, this means that the heat pump must be provided with constant water flow in order to achieve temperature measurement. Likewise the heat pump will not run without water flow.

In situations where the heat pump is installed into the existing pool filtration system, the operation of the heat pump will be controlled by pool temperature at times when the recirculating pump is running. If the recirculating pump is time-clocked to suit filtration routines, then the period of power supply to the filter pump may need to be progressively expanded with cooler air temperatures (as the heater will need to run longer hours than filtration needs in cooler months). If not automated, chlorination settings may also need adjustment.

By contrast, in warmer months the heat pump will run less hours than the filter. The heat pump may be left ON, (i.e. with power supply), as it will only run if the pool temperature falls below the desired set point by  $-0.5^{\circ}\text{C}$ .

Where the Heat Pump is installed on a separate heating circuit (i.e. separate recirculating pump), the ideal scenario is that a control logic/interface is in place between the heat pump and the recirculating pump. That is, flow is provided only when heating is required so that the pump use is limited strictly to those hours needed to maintain the pool temperature.

The Accent heat pump may be provided with a pump control function via its Rheem IQ® controller. With this in place a run signal is provided to the pump contactor (not supplied) and the pump is controlled via temperature signal. (Refer to the Rheem IQ® operating manual.



## PRECAUTIONS

**Where damage to property can occur in the event of the heat pump leaking, the unit must be installed in a drained drip tray in accordance with AS/NZS3500.4 and local codes and regulatory authority requirements.**

**The heat pump must be maintained in accordance with the Owners Guide and Installation Instructions.**

**If the heat pump is to be used in a commercial application, you should ensure that you have adequate redundancy within the heating system. This should ensure the continuity of heating in the event that the heat pump should become inoperable for any reason. We recommend that you seek advice from your Accent representative or your specifier about your needs and building redundancy into your heating system.**

**In operating your heat pump, you should ensure that the hydraulic layout of the system is correct. Particular care should be given to ensure that excess pressure is not created to the heat pump's internal heat exchanger(s).**

## SECTION 2 COMMISSIONING

---

The Accent heat pump is fully charged with refrigerant. The following checks should be carried out:

1. Installation and operation instructions should be read prior to commissioning.
2. The unit should have unrestricted supply of fresh air to the coil and exhaust air removed from closed in areas.
3. The unit should stand on a firm level base but noting that it should have a small incline towards the condensate drainage inbuilt to the case (plumbing end).
4. Noise should be directed away from living areas.
5. Water connected correctly as indicated.
6. Any chemicals are introduced downstream of unit.
7. Condensate drain runs to waste.
8. Unit is wired correctly.

9. Unit is not to be started without flow of water.
10. The thermostat is set to the required parameters.

### **SECTION 3                      OPERATION**

---

1. The Heat Pump unit has an internal thermostat, located at the control panel, which maintains the outlet water at the selected temperature. The normal operating temperature range is 25°C to 38°C.
2. Select a suitable temperature about 38°C for spa and 28°C for pools.
3. The unit is fully automatic and after commissioning, the operation of the unit will be triggered by water flow and the set temperature parameters.
4. In low ambient temperature ice may form on the evaporator coil. If this occurs the machine will automatically go into defrost operation.
5. The unit can be controlled via time-clock through water pump. The unit has in-built water flow/pressure switch and will sense water flow to start unit.
6. Running Time ~ The Heat Pump is controlled by a thermostat which will switch the unit off when the set temperature is reached. The running time will vary with the weather, amount of wind, length of time the pool cover is off and the pool usage. As this is an automatic operation, manual switching is not necessary, i.e. allow the Heat Pump to monitor the pool temperature. Long periods of being switched off will make the units job more difficult, especially when a constant temperature is desired.



7. Backwashing – Always isolate the unit electrically prior to backwashing.



8. Valve Setting – Do not adjust any valves whilst the pump is running.

Note that the initial temperature rise for swimming pool heating may seem slow but the unit is probably working. Heat pumps have a much lower KW/MJ per hour heat output capacity than gas and will need to operate for more time to deliver the same heat transfer.

## Thermostat Operation

The temperature shown in normal display mode is the entering water temperature (i.e. the current water temperature).

To check or adjust the current set-point temperature, reference should be made to the controller manufacturer's operating instructions provided with the unit documentation.

As a guide heat pumps fitted with an Carel PJEZ control:

To check set point, push and hold the "Set" button for 1 second, current set point will be displayed, push the "up" or "down" arrows to adjust the value. Press "set" to confirm the value.

Adjusting the differential or Hysteresis "All parameters" screen must be accessed.

Press and hold "Set" for approx 5 seconds, PS will be displayed.

Press "Set" then "Arrow up" till the password value "22" is displayed "PS" will be displayed

Press "Arrow up" unit parameter "rd" is displayed. Press "Set" Value will be displayed.

Press "Arrow up" or "Down" to set the desired value. Press "Set"

Press and hold "Set" for approx 5 seconds, until temperature is displayed to save values.

Further instructions on the operation of the PJEZ controller and a detailed table of the operating parameters is provided in the back section of this manual.

As a guide, heat pumps fitted with the Rheem IQ® tariff intelligent control – Refer to the Rheem IQ Tariff Controller User Manual

- *The relevant Carel PJEZ easy or Rheem IQ operating manuals should have been provided to you with delivery of the heater. If these have not been received, please contact us directly and we will be pleased to provide copies.*

## Heat Up Time

Heat up time on pool and spa will vary depending on outside air temperature, wind speed over pool, amount of sun on pool, unit size and running time available.

To maintain temperature and reduce running cost a heat retention blanket must be used overnight or whenever pool or spa is not in use.

## De-Icing

Refrigerant hot gas by-pass is intended for locations where ice build-up on cooling coils will be occasionally experienced.

Reverse cycle de-icing system is intended where ambient temperatures are likely to fall below 5°C for prolonged periods.

## **SECTION 4                      PERIODIC MAINTENANCE**

---

It is recommended minor maintenance be performed monthly by the dwelling or pool owner.

The minor maintenance includes:

1. Fins of the coil must be cleaned periodically.
2. Check condensate drain for blockages.
3. Ensure that water is not collecting in the base of the unit.

### **RECOMMENDED ACCENT AIR SERVICE PROCEDURE**

1. In locations where ambient temperature can be very low, if unit is not used for a long period, it is essential to drain all water from unit to prevent ice build-up in water pipe-work.
2. Leak test refrigerant system once every 6 months.
3. Check correct function of pressure switches, de-ice control and solenoid valves if fitted.
4. Check thermostat.
5. Check fan motor support and fan blades for vibration or noise.
6. Check condensate drain for blockages.
7. Check water inlet and outlet connections for any leaks.
8. Check current draw.
9. Check operating voltage at compressor terminal mains with load and at start-up.
10. For commercial installations, a program of servicing every four months is recommended and should be undertaken by a specialist refrigeration mechanic. For residential applications, an annual service program is recommended.
11. The unit casing is designed for outdoors installation and no specific maintenance should be necessary. If the case is cleaned, ensure that power to the unit is switched off.
12. Clean evaporator coils. If coils are becoming clogged with leaves or debris, remove any surrounding source of leaf or other litter.

### **Heat Exchanger Care**

- Care should be taken of the heat exchanger by correct approach to the hydraulic layout of the installation and chemical treatment.
- It is fundamental that the nominated flow rate of the unit be maintained and pump selection should be made with knowledge of the target figure. Reference should be made the individual unit's specification with current requirements shown below. As specification data may vary with product development and/or where units are custom-manufactured, flow rates should be confirmed for validity with Accent at the time of installation.
- Some of the heat pump includes an internal by-pass. The factory setting allows for the by-pass to be partially open, allowing diversion of part of the total flow.

- If the hydraulic layout and recirculating pump capacity is seen to provide a flow well above the specified flow litres/sec or at excess pressure, then an external by-pass should be installed or alternatively, the pump flow should be moderated.
- For seasonal shut-downs, always allow water to pass through the heater, even if the heater is not being used. If the heater is isolated with chlorinated water or in its water piping, chlorine gases may corrode the heat exchanger. Accent's warranty will be voided where chemical corrosion is clearly diagnosed as the cause of failure.
- For shutdowns in locations experiencing freezing conditions, the piping system and heater must be drained. The heater should be flushed with clean fresh water for several minutes to wash away all traces of chemicals, then drained. It is recommended that the entire system is purged using pressurised air to force remaining water from the system.
- If water enters the refrigeration system due to heat exchanger failure, contact supplier for advice.



**Caution! Motorised diverter valves must never be installed so that they can move through a closed inlet position while the pump is operating and allow the system to pressurise. This situation will void the Accent Air warranty and may significantly damage the pool heater and other system equipment.**

<i>Flow Rate Requirements</i>	
<b>Models HWP10BB- HWP80</b>	<b>2.8l/sec</b>
<b>Models HWP100-120</b>	<b>5.6l/sec</b>
<b>Models HWP150-180</b>	<b>8.4l/sec</b>
<b>Models HWP200-300</b>	<b>11.2l/sec</b>

## SERVICE ASSISTANCE

- ***Service must only be undertaken by properly authorised personnel***

You may contact Accent Air directly on ☎02 8706 8430 or your local Accent Air distributor to arrange for your service or recommend a qualified service organisation.

It will be necessary for you state the model number and serial number of your heater. This information will be found on the heater data plate.

### How long will the Pool & Spa Heater Last

**Your Accent Air pool heater is supported by a manufacturer's warranty. There are a number of factors that will affect the length of service. These include but are not limited to the water chemistry, flow rate, the water pressure, the service & maintenance program and the usage pattern.**



**Caution! Any troubleshooting involving electrical or refrigeration must only be carried out by Licensed Persons. Any electrical work is to be undertaken with the unit electrically isolated.**

### Machine Will Not Start

As a safety feature, the Heat Pump has a programmed time delay between provision of power and unit start, usually a few minutes. Wait for this time delay before making the following checks:

- Check electrical supply to the unit is ON.
- Check phases are in correct rotation (for three phase units only) Red and Green lights lit on Phasefail sequence relay. If red light is lit only this indicates a loss of phase or incorrect
- Check water flow
- Check electrical for loose connections and wiring.
- Check supply fuse.
- Check thermostat is correctly set.

### Pool Will Not Heat

- Check that the ejected air temperature is colder than incoming air. Check that the evaporator and internal pipes sweating. This is evidence of heat removal from the air, suggesting that the heater is working.
- Check inlet louvres, outlet grill and condenser coil has satisfactory airflow and is not clogged.
- Check that thermostat is correctly set
- Check that water pump is running
- Check water filter is operational
- Check that inlet valves are not closed
- Check ambient air temperature suits design standards

### Compressor Will Not Run

<b>Possible Cause</b>	<b>Possible Solution</b>
System stopped on safety lockout	A disturbance in water flow may have triggered the safety lockout. Reset unit by switching OFF, then ON. If unit does not respond, mechanic to fit gauges and check refrigerant charge and HP/LP operation. Possible condenser water flow failure. Check condenser pump water entering temperature and flow rate.
Motor windings faulty	Contact Accent.

### Compressor Motor Hums But Will Not Start

<b>Possible Cause</b>	<b>Possible Solution</b>
Low voltage	Provide adequate voltage.
Wrong motor connections	Check with name plate or wiring diagram.
Tight or seized compressor	Replace.
No power on one phase	Check circuit breakers, main switch and wiring for fault.

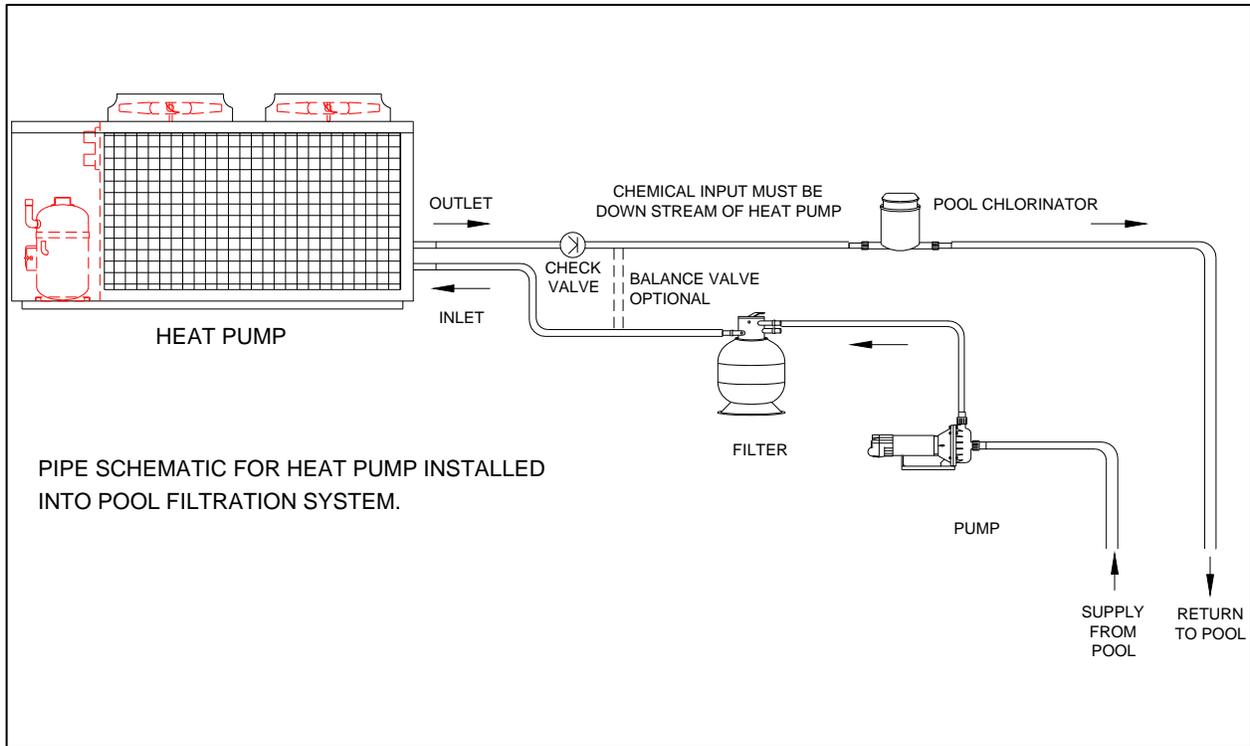


Diagram 1: Typical Single Pool Heat Pump Schematic For Pool Filtration


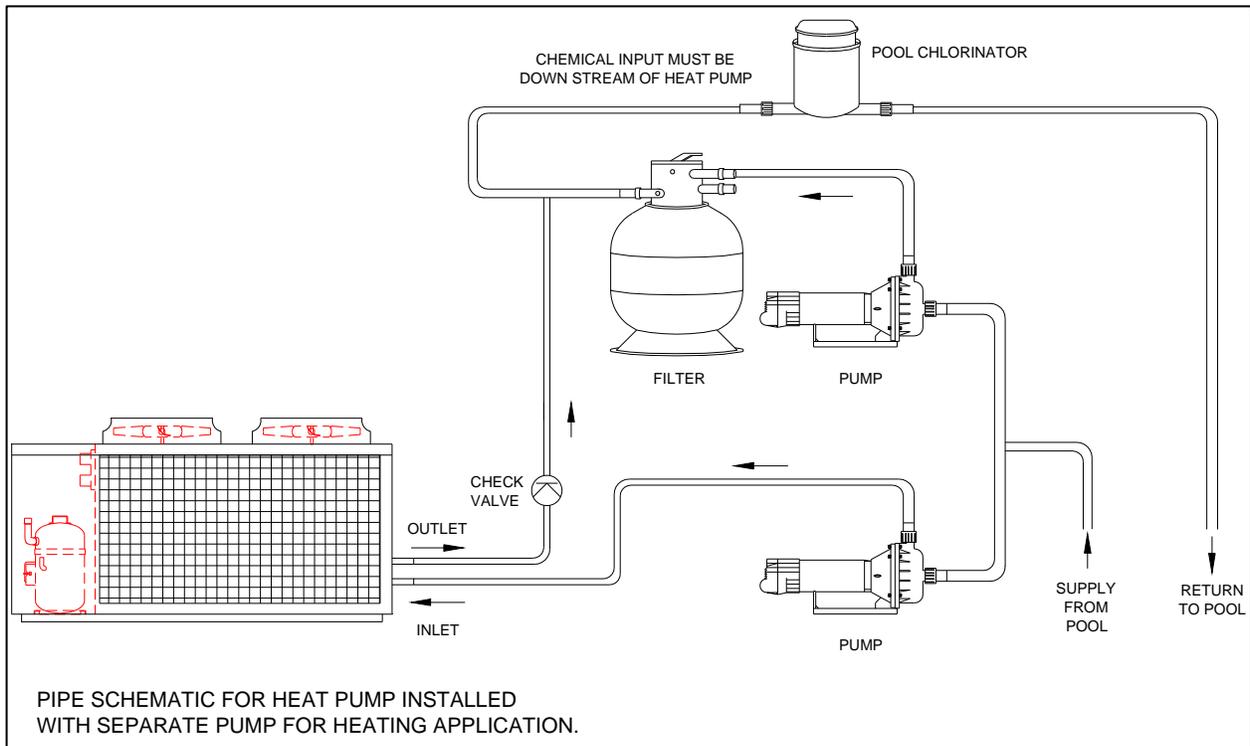


Diagram 2: Typical Single Pool Heating Schematic

### Diagram 3: Typical Multiple Pool Heat Pump Installation

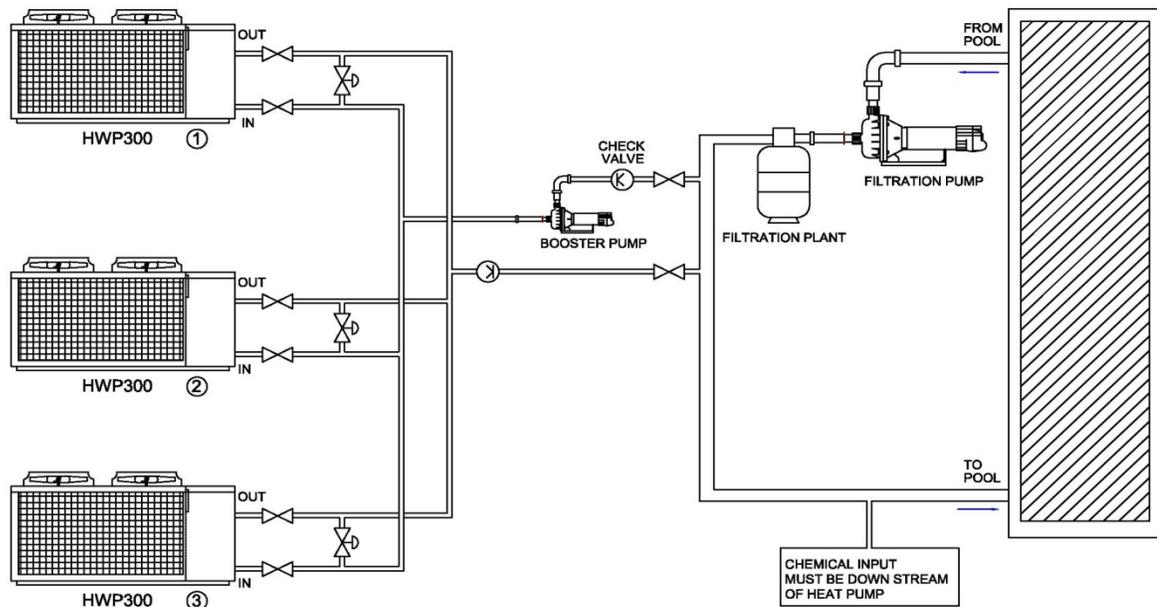

## SECTION 7 SPECIALITY APPLICATIONS

1. The Accent Heat Pump is typically manufactured as a heating only type but it can also be provided for the following applications:

Heat / Cool units: Where a constant temperature is required where the application is influenced by the ambient conditions. Applications include pool heating, aquaculture and hydronic heating / cooling.

Heat / Chill: These units are used on a multi use application where heating or chilling is required. Applications include spa and plunge pools for sport recovery applications.

Chilling only: These units can be used for plunge pools and process cooling applications.

2. Heat/cool units are designed for operation at a typical temperature range between 20°C and 38°C.
3. Heat/chill or chilling only units are purpose designed and can operate to chill water to colder temperatures. The design minimum entering water temperature would be 10°C.
4. Heat/cool and heat/chill units may be designed as automatic or manual changeover.
5. Manual changeover units include a changeover switch mounted external to the case at the compressor end.
6. Automatic changeover is a 2 stage thermostat with an adjustable dead band.

### Thermostat Operation

The temperature shown in normal display mode is the entering water temperature (i.e. the current water temperature).

Operation occurs between the set point temperature and a lower set point, determined by the lag or DIFFERENTIAL programmed. Generally, the lag is negative 1°C, meaning that heating will occur at set point less 1°C. Heating will stop when set point is reached.

To check or adjust the current set-point temperature, reference should be made to the controller manufacturer's operating instructions provided with the unit documentation.

**NOTE:**

**The relevant controller manufacturer's operating manuals should have been provided to you with delivery of the heater. If these have not been received, please contact us directly and we will be pleased to provide copies.**



## Set Point



PRESS & HOLD "SET" for 1 Second  
"SET POINT" Value will be displayed



PRESS ARROW "UP" or "DOWN"  
to set the desired value. \*\*



PRESS "SET" to confirm the value

## Frequent (F) Parameters



PRESS & HOLD "SET" for  
approx 5 seconds

"PS" will be displayed



A) PRESS "ARROW UP" or "DOWN"  
to select the parameter to be changed.  
eg rd = differential



B) PRESS "SET"

The Value Set for this parameter will  
be displayed



C) PRESS ARROW "UP" or  
"DOWN" to set the desired value.\*\*



D) PRESS "SET"  
to confirm the value

REPEAT A-D Until all desired  
parameters have been set.



PRESS & HOLD "SET" until temp is  
displayed (approx 5 seconds)  
to confirm all changes

## All Parameters



PRESS & HOLD "SET"  
for approx 5 seconds

"PS" will be displayed



PRESS "SET" then "ARROW UP" till  
the password value "22" is displayed



PRESS "SET" to confirm

"PS" will be displayed



A) PRESS "ARROW UP" or "DOWN" to  
select the code the of parameter to be  
changed. eg rd = differential



B) PRESS "SET"  
The Value Set for this parameter will be  
displayed



C) PRESS "ARROW UP" or "DOWN"  
to set the desired value.



D) PRESS "SET"  
to confirm the value

REPEAT A-D Until all desired  
parameters have been set.



PRESS & HOLD "SET" until temp is  
displayed (approx 5 seconds)  
to confirm all changes

+AU00PJEZR rev1.3 - 02/12/2008

**For technical support contact CAREL Australia Pty Ltd**  
**Sydney office ph: 02 8762 9200 fax: 02 9764 6933**  
**Technical literature can be downloaded from [www.carel.com](http://www.carel.com)**

Please note: Please read these instruction in conjunction with the parameter list. It is recommended that the controllers be programmed before connecting or activating the plant to be controlled (eg. compressors)

\*\* If the controller is keypad locked the value will not change. See parameter H2.

# PJEZ easy summary of operating parameters

Code	Parameter	Unit	Type	Min.	Max.	Def.	New
/2	Probe measurement stability	-	C	1	15	4	
/4	Select display probe	-	F	1	3	1	
/5	Select °C or °F (0 = °C)	-	C	0	1	0	
/6	Decimal point (0 = enabled, 1 = disabled)	-	C	0	1	0	
/C1	Calibration of probe 1	°C/°F	F	-127	127	0	
/C2	Calibration of probe 2	°C/°F	F	-127	127	0	
/C3	Calibration of probe 3	°C/°F	F	-127	127	0	

St	Temperature set point	°C/°F	S	r1	r2	4	
rd	Controller differential	°C/°F	F	0	19	2	
r1	Minimum Set Point allowed	°C/°F	C	-50	r2	-50	
r2	Maximum Set Point allowed	°C/°F	C	r1	150	90	
r3	Mode 0=cool with defrost, 1=cool only, 2=heating	flag	C	0	2	0	
r4	Value to increase Set Point by from Digital Input	°C/°F	C	0	20	3	

c0	Comp. and fan start delay at power up	min	C	0	100	0	
c1	Minimum time between 2 comp starts	min	C	0	100	0	
c2	Minimum compressor OFF time	min	C	0	100	0	
c3	Minimum compressor ON time	min	C	0	100	0	
c4	Duty setting	min	C	0	100	0	
cc	Duration of continuous cycle	hours	C	0	15	4	
ca	Alarm bypass after continuous cycle	hours	C	0	15	2	

d0	Defrost type (0=elec / temp, 1= H.Gas / temp, 2 = elec / time, 3 = hot gas / time ...)	-	C	0	4	0	
dl	Interval between defrosts (if not using real time)	hours	F	0	199	8	
dt	End defrost temperature, (if d0 = 0 or 1)	°C/°F	F	-50	127	4	
dP	Maximum defrost duration	min	F	1	199	30	
d4	Defrost at power up (0 = no, 1 = yes)	-	C	0	1	0	
d5	Defrost delay at power up (if d4=1)	min	C	0	199	0	
d6	Display during def. (0=dF (flash), 1=locked)	-	C	0	1	1	
dd	Dripping time after defrost	min	F	0	15	2	
d8	Bypass alarms after defrost	hours	F	0	15	1	
dbd	Alarm delay after door open - from dgi input	hours	C	0	250	0	
d9	Defrost priority over compressor protection	-	C	0	1	0	
dI	Display defrost probe temp d/I=def P1, d/I2=def P2)	°C/°F	F	-	-	-	
dC	Time basis for defrost (0=hr:min, 1=min:sec)	-	C	0	1	0	

A0	Alarm and fan differential	°C/°F	C	-20	20	2	
AL	Low alarm temp (if A0<-<0 absolute, if A0>0 relative)	°C/°F	F	-50	150	0	
AH	High alarm temp (if A0<-<0 absolute, if A0>0 relative)	°C/°F	F	-50	150	0	
Ad	Low and high temperature alarm delay	min	C	0	199	0	
A4	Configuration of digital input 1	-	C	0	11	0	
A7	External alarm delay if using digital input	min	C	0	199	0	
A8	Enable alarm 'Ed' (defrost end on time)	flag	C	0	1	0	
Ac	High condenser temperature alarm set point	°C/°F	C	-50	150	70	

Code	Parameter	Unit	Type	Min.	Max.	Def.	New
AE	High cond. temp. alarm differential	°C/°F	C	0.1	20	5	
Ac	High cond. temp. alarm delay	min	C	0	250	0	
F0	Enable evaporator fan control	flag	C	0	1	0	
F1	Evaporator fan control set point	°C/°F	F	-50	127	5	
F2	Fans cycle with comp (0=no, 1=yes)	flag	C	0	1	1	
F3	Fans in defrost (0 = on, 1 = off)	flag	C	0	1	1	
Fd	Fans delay after dripping	min	F	0	15	1	
H0	Serial address	-	C	0	207	1	
H1	AUX output configuration	flag	C	0	3	0	
H2	Keypad (0=disabled, 1 = enabled)	flag	C	0	1	1	
H4	Buzzer (0=enabled, 1 = disabled)	flag	C	0	1	0	
H5	ID code (read-only)	flag	F	0	31	-	
EZY	Select set of default parameters	-	C	0	4	0	

EZY parameter							
PJEZ (S, X)	EZY = 1: normal temperature, no defrost						
	EZY = 2: normal temperature with timed defrost						
	EZY = 3: normal temperature, heating output						
	EZY = 4: normal temperature, defrost controlled by temperature (d0 = 4)						
PJEZ (C, Y)	EZY = 1: low temperature with hot gas defrost						
	EZY = 2: low temperature with automatic night-time set point variation via digital input						
	EZY = 3: low temperature with management of alarm via digital input						
	EZY = 4: low temperature, defrost controlled by temperature (d0 = 4)						

ALARM TABLE							
Alarm code	Buzzer & alarm relay	LED	Description	Parameters involved			
E0	active	ON	probe 1 error (control)	-			
E1	not active	ON	probe 2 error (defrost)	[d0 = 0/1/4] [F0 = 1]			
E2	not active	ON	probe 3 error (cond)	[A4 = 10]			
IA	active	ON	external alarm	[A4 = 1] [+A7]			
dOR	active	ON	open door alarm	[A4 = 7/8] [+A7]			
LO	active	ON	low temperature alarm	[AU] [Ad]			
HI	active	ON	high temperature alarm	[AH] [Ad]			
EE	not active	ON	unit parameter error	-			
EF	not active	ON	operating parameter error	-			
Ed	not active	ON	defrost ended by timeout	[dP] [dI] [d4] [A8]			
dF	not active	OFF	defrost running	[d6 = 0]			
cht	not active	ON	dirty condenser pre-alarm	[A4 = 10]			
CHI	active	ON	dirty condenser alarm	[A4 = 10]			
EIC	not active	ON	clock alarm	if bands active			

**1. THE ACCENT AIR WARRANTY – GENERAL**

- 1.1 This warranty is given by Accent Air Pty Limited ABN 28 062 383 224 of 21 Atkinson Street, Liverpool New South Wales.
- 1.2 For the purposes of this document, the Accent heat pump water heater is referred to as the "unit".
- 1.3 Accent Air offer a trained and qualified national service network who will repair or replace components at the address of the heat pump subject to the terms of the Accent Air warranty. Accent Air Service, in addition can provide preventative maintenance and advice on the operation of the unit. The Accent Service contact number is **02 8706 8430** with service personnel available to take your call from 8am to 4pm Monday to Friday, (hours subject to change).
- 1.4 For details about this warranty, you can contact us on **1300 132 950**
- 1.5 The terms of this warranty are set out in Section 2 and apply to units manufactured after 1<sup>st</sup> January 2012.
- 1.6 If a subsequent version of this warranty is published, the terms of that warranty will apply to units manufactured after the date specified in the subsequent version.
- 1.7 The application of the Warranty is dependent on payment for the unit being made in accordance with the Company's Standard Terms and Conditions.

**2. TERMS OF THE ACCENT AIR WARRANTY AND EXCLUSIONS TO IT**

- 2.1 The warranty period will commence from the end user's date of purchase.
- 2.2 The decision of whether to repair or replace a faulty component is at Accent Air's sole discretion.
- 2.3 If you require a call out and we find that the fault is not covered by the Accent Air warranty, you are responsible for our standard call out charge. If you wish to have the relevant component repaired or replaced by Accent Air that service will be at your cost
- 2.4 Where a failed component is replaced under this warranty, the balance of the original warranty period will remain effective. The replacement does not carry a new Accent Air warranty.
- 2.5 Where the unit is installed outside the boundaries of a metropolitan area as defined by Accent Air or further than 25 km from either a regional Accent Air branch office or an Accredited Accent Air Service Agent's office, the cost of transport, insurance and travelling between the nearest branch office or Accent Air Accredited Service Agent's office and the installed site shall be the owner's responsibility.
- 2.6 Where the unit is installed in a position that does not allow safe or ready access, the cost of that access, including the cost of additional materials handling and/or safety equipment, shall be the owner's responsibility. In other words, the cost of dismantling or removing cupboards, doors or walls and the cost of any special equipment to bring the pool heater to floor or ground level or to a serviceable position is not covered by this warranty.
- 2.7 This warranty only applies to the original and genuine Accent Air unit in its original installed location and any genuine Accent Air replacement parts.
- 2.8 The Accent Air warranty does not cover faults that are a result of:
  - a) Accidental damage to the unit or any component (for example: (i) Acts of God such as floods, storms, fires, lightning strikes and the like; and (ii) third party acts or omissions).
  - b) Misuse or abnormal use of the unit.
  - c) Installation not in accordance with the Owner's Guide and Installation Instructions or with relevant statutory and local requirements in the State or Territory in which the unit is installed.
  - d) Connection at any time of the unit in anyway which does not comply with the guidelines as outlined in the Owner's Guide and Installation Instructions.
  - e) Repairs, attempts to repair or modifications to the unit by a person other than Accent Air Service or an Accent Air Accredited Service Agent.
  - f) Faulty plumbing or faulty power supply.
  - g) Failure to maintain the unit in accordance with the Owner's Guide and Installation Instructions.
  - h) Transport damage where freight is arranged by others.
  - i) Fair wear and tear from adverse conditions (for example, corrosion).
  - j) Cosmetic defects.
- 2.9 Subject to any statutory provisions to the contrary, this warranty excludes any and all claims for damage to furniture, carpet, walls, foundations or any other consequential loss either directly or indirectly due to leakage from the unit, or due to leakage from fittings and/ or pipe work of metal, plastic or other materials caused by water temperature, workmanship or other modes of failure.
- 2.10 This warranty is not applicable if the installation of the unit is carried out by an installer not approved by Accent Air or persons who are not qualified to do so in the opinion of Accent Air.

2.11 Unless a titanium heat exchanger is fitted, this warranty does not cover repair or replacement of the Heat Exchanger due to corrosion caused by use of poor quality water not complying with the following

- a) pH to be maintained between 7.0 and 8.0
- b) alkalinity not exceeding 200ppm

2.12 Where a titanium heat exchanger is fitted, the extended warranty protects against failure due to water imbalance. The warranty is not applicable if failure is caused due to hydraulic damage, such as excess pressure. The extended parts warranty covers the cost of a replacement heat exchanger but excludes labour or associated costs or the cost of any subsequent damage, of any type.

2.13 This warranty does not cover the replacement or replenish of refrigerant within the unit.

2.14 It is a condition of warranty that the customer has stipulated correctly and precisely the capacity and performance required of the System and the conditions under which the System shall operate. Any performance figures given by us in the Quotation or mentioned or referred to in or prior to the contract are such as we expect to obtain on test but are not guaranteed. All such performance figures whether analytical or financial are estimates only and the customer must independently satisfy itself as to their accuracy and completeness.

Failure to perform as duly specified shall be notified to us in writing and we shall be given every reasonable facility to investigate the cause of the failure and to recommend remedial action.

If it is clearly established that the fault is due to an error in calculation by us or failure by our employees to carry out instructions, the fault shall be rectified by us in as reasonable a period of time as possible and at no cost to the Customer. Should the remedial action fail to achieve the designed performance the limit of our liability either the negligence or for breach of statutory duty or otherwise shall be for us to remove the equipment at our expense or to refund to the buyer the purchase price in full.

### 3. WHAT IS COVERED BY THE ACCENT AIR WARRANTY FOR THE UNITS DETAILED IN THIS DOCUMENT

3.1 Accent Air will repair or replace a faulty component of your unit if it fails to operate in accordance with its specifications as follows:

Series	What components are covered	The period in which the fault must appear in order to be covered	What coverage you receive
HW, HWP, HWW & HWWP	Major Parts*	Years 1 to 2	Repair and/or replacement of the faulty parts, free of charge, when installed for the purpose of heating a pool or spa. Labour is not covered in the 2 <sup>nd</sup> year
	Minor Parts*	Year 1	Repair and/or replacement of the faulty parts, free of charge, when installed for the purpose of heating a pool or spa
	Protection of the heat exchanger due to chemical corrosion	Years 1 to 10	Repair and/or replacement of the faulty parts, free of charge, when installed for the purpose of heating a pool or spa. Labour is not covered from years 2 to 10.
All above models	Labour	Year 1	Repair and/or replacement of the faulty parts, free of charge

- For the purposes of this warranty, Major Parts are defined as compressors, heat exchangers and evaporators. Minor Parts are defined as the remainder of the unit including refrigeration piping, valves, fans, electrical components and refrigerant.

#### 4. ENTITLEMENT TO MAKE A CLAIM UNDER THIS WARRANTY

- 4.1 To be entitled to make a claim under this warranty you need to:
  - a) Be the owner of the unit or have consent of the owner to act on their behalf
  - b) Contact Accent Air Service without undue delay after detection of the defect and, in any event, within the applicable warranty period.
- 4.2 You are **not** entitled to make a claim under this warranty if your unit:
  - a) Does not have its original serial numbers or rating labels.
  - b) Is not installed in Australia.

#### 5. HOW TO MAKE A CLAIM UNDER THIS WARRANTY

- 5.1 If you wish to make a claim under this warranty, you need to:
  - a) Contact Accent Air on 02 8706 8430 and provide owner's details, address of the unit, a contact number and date of installation of the heater or if that's unavailable, the date of manufacture, model and serial number (from the rating label on the heater)
  - b) Accent Air will arrange for the heater to be tested and assessed on-site.
  - c) If Accent Air determines that you have a valid warranty claim, Accent Air will repair or replace the heater in accordance with this warranty
- 5.2 Any expenses incurred in the making of a claim under this warranty will be borne by you.

#### 6. THE AUSTRALIAN CONSUMER LAW

- 6.1 Our goods come with guarantees that cannot be excluded under the *Australian Consumer Law*. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
- 6.2 **The Accent Air warranty (set out above) is in addition to any rights and remedies that you may have under the *Australian Consumer Law*.**

#### 7. INTERNATIONAL WARRANTY PROVISIONS

- 7.1 Contact Accent Air for international warranty terms and conditions.